



Nitrogen Oxides $\text{NO} + \text{NO}_2$ (total quantification) No.11HA

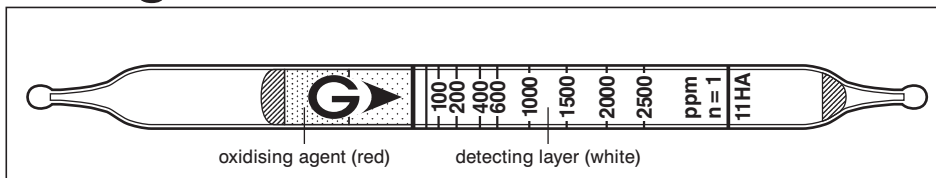

Performance The minimum scale value (50ppm) is not printed on the tube, but only the scale line is printed.

Measuring range	(50) to 2500 ppm
Number of pump strokes	1 (100 ml)
Correction factor	1
Sampling time	1.5 min
Detecting limit :	10 ppm (1 pump stroke)
Colour change :	White → Green
Corrections for temperature & humidity :	Unnecessary
Relative standard deviation :	10 % (for 50 to 600 ppm) , 5 % (for 600 to 2500 ppm)
Shelf life :	2 years

Reaction principle

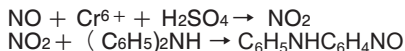

Possible coexisting substances and their interferences

Substance	Concentration	Interference	Changes colour by itself to
Hydrogen chloride	≥ 500 ppm	Unclear demarcation	Bluish purple at 100 ppm
Ozone	≥ 200 ppm	Unclear demarcation (Two layers)	Brown
Sulphur dioxide		No	No
Hydrogen sulphide		No	No

Nitric oxide is oxidized to form nitrogen dioxide. If organic solvent of high concentration is coexisting, oxidising agent is deteriorated to produce minus error for Nitric oxide concentration.

Calibration gas generation

High pressure gas cylinder method